


CONSTANT PRESSURE TENT VENTO®

INCLUDED

-  x 4 eyelet pins with lashings
-  x 20 straight pins
-  x 1 mounting hammer
-  x 1 valve key
-  x 1 transport bag
-  x 1* telescopic wall mounting rod

* telescopic pole only for 5 x 5 m and 6 x 6 m. tents.

NEEDED

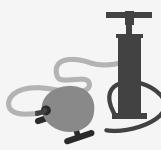
-  hand pump or electric

ASSEMBLY INSTRUCTIONS




Keep the valves and pump clean. Be careful not to suck dirt, such as sand or mud, into the cartridge when pumping.

flat top view

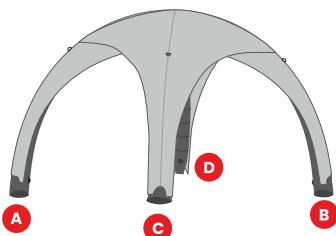


1 Take the tent out of the bag and lay it flat. If possible, use a tarpaulin to do this so that you don't get the cover dirty. Unfold the tent legs so that 2 are inside (C+D) and one each outside (A+B).

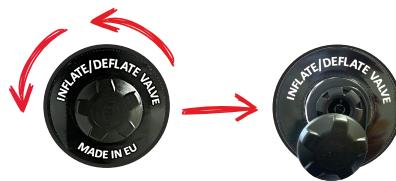


3 Prepare all inflate/deflate valves for inflation by unscrewing the nuts. They are located on the bottom of each leg.

flat top view

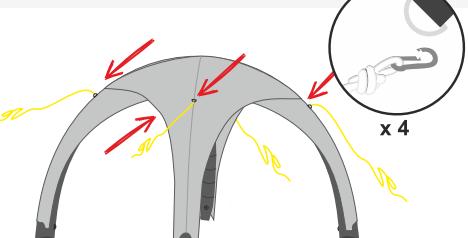


2 Hook the lashing lines to the eyelets using snap hooks.

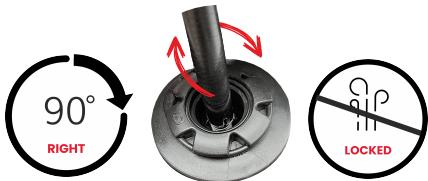

4 Lock each valve by turning the diaphragm needle approximately 90° clockwise with the dedicated key, this prevents air escaping. An unblocked valve will bleed air from the product!




flat top view

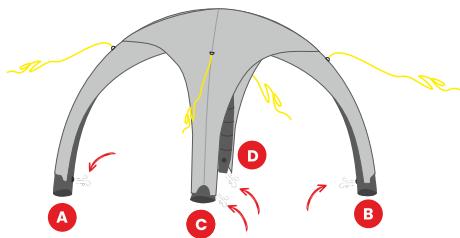

5 Prepare a pump with a dedicated valve tip. Start pumping from the outer legs (A + B). Then inflate the middle leg (C). Inflate the last leg (D) slowly erect the tent (fig.1). Tighten all valve nuts on the legs.

! For ground that prevents the use of pegs/anchors, use dedicated sand weights to the tent legs / weight bags to the lashing ropes.

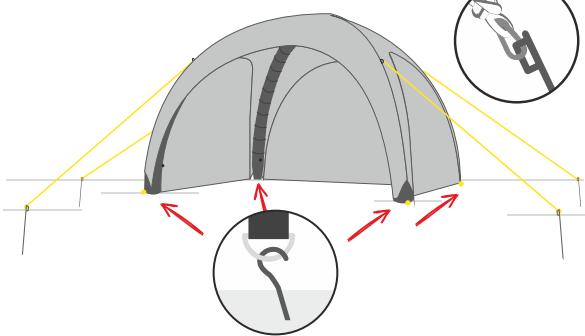

6 Stabilise the tent with the lashing ropes, they must be taut and stretched to their full length. Fix the pegs to the ropes and drive them into the ground with a hammer. Secure the legs to the ground with pins. Zip up the walls, each wall can be secured additionally to the ground with pins.

CONSTANT PRESSURE TENT VENTO®

INCLUDED


x 4

eyelet pins with lashings


x 20

straight pins


x 1

mounting hammer


x 1

valve key


x 1


transport bag


x 1*

telescopic wall mounting rod

 * telescopic pole only for
5 x 5 m and 6 x 6 m. tents.

NEEDED

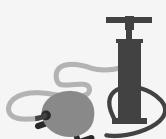


hand pump or electric

DISASSEMBLY INSTRUCTIONS




1 Remove all anchors/pins from lashing lines, legs and walls. Detach the walls.

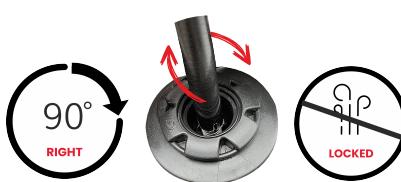


3 Unlock the valve by turning the diaphragm needle approximately 90° to the left and start pumping air out of the first leg (D).



5 Roll the tent from the top towards the bottom while pushing air towards the inflate/deflate valve.

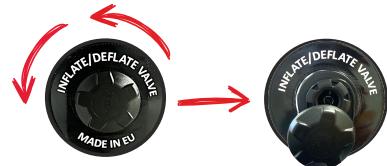

2 Unscrew the nut and prepare the inflate/deflate valves to pump out the air. These are located on the bottom of each tent leg.

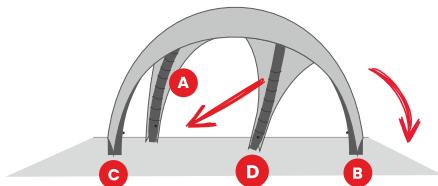

4 As the air escapes from the first leg (D), pull it towards the inside of the tent, then deflate the opposite leg (C) and finally from the other two (A and B). Fold the legs into the centre of the tent.

6 Assemble and pack the mounting kit into the accessory bag. Pack the tent in the dedicated carry bag.

INSTRUCTIONS OF USE

1. Please read the product assembly/disassembly instructions before assembly.
2. When transporting, setting up and assembling the product, take special care to avoid damage to the product or injury during assembly.
3. Before disassembling the product, ensure that there are no sharp objects, tools etc. with sharp edges in the area where the product will be assembled.
4. If using an electric pump, check the condition of the wires before connecting to avoid electric shock.
5. Do not obstruct the safety valves that regulate the air pressure in the product.
6. During increasing gusts of wind, systematically check the seating of the pins/anchors. In winds above 38km/h, the product should be folded immediately.
7. During rain or snowfall, excess water/snow must be systematically removed from the product.
8. The seams of the promotional tents are not sealed to ensure full waterproofing. Seepage at the seams does not constitute a defect in the product.
9. Any soiling must be removed immediately with a damp cloth and warm water without the use of detergents. The use of high-pressure cleaners is prohibited.
10. When using the product, monitor the condition of the sheathing and avoid mechanical damage. Damage to the sheathing may cause the structure to collapse.
11. The product should be cleaned and dry before dismantling. If due to weather or other circumstances the product is assembled wet and dirty, it should be disassembled again as soon as possible, dried and cleaned.
12. The product should be stored in a dry and clean place.


 risk of ignition following
contact with a fire
or ignition source

 risk of entanglement
or tripping over
lapping ropes

 risk of overturning due to
incorrect installation
or strong winds

 inappropriate use
e.g. climbing

 risk of damage to the
power cable, e.g. on an
electric pump