

CONSTANT PRESSURE TENT VENTO® SIX

INCLUDED

x 6

eyelet pins with lashings


x 30

straight pins


x 1

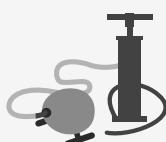
mounting hammer


x 1

valve key


x 1

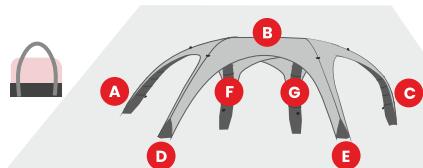
transport bag

NEEDED


hand pump or electric

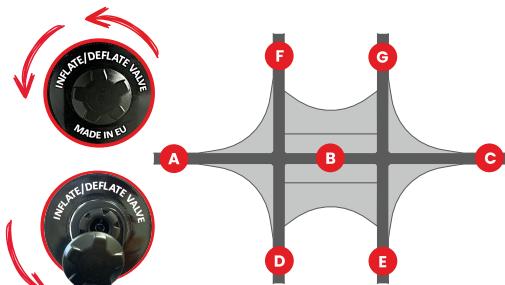
**ASSEMBLY
INSTRUCTION**


Keep the valves and pump clean. Be careful not to suck dirt, such as sand or mud, into the cartridge when pumping.


1

Take the tent out of the bag and lay it flat. If possible, use a tarpaulin to do this so as not to not to get the cover dirty.

top view of shell plating


3

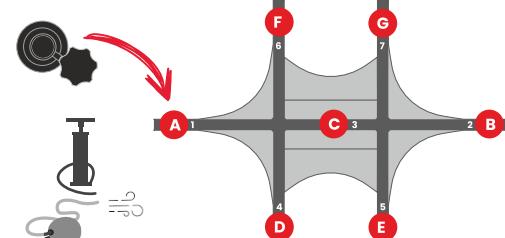
Unscrew the nuts on the inflate/deflate valves for inflation. They are located on the bottom of each leg and on the middle tent insert.

fig. 1


5

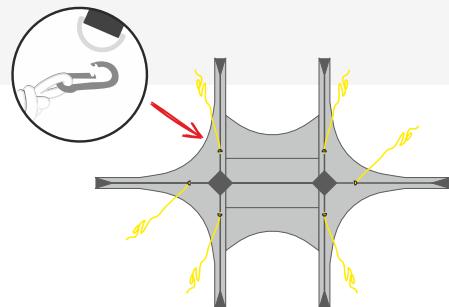
Prepare the pump and start pumping from the outer legs A and B. Then inflate the inner insert C, then legs D and E. While pumping the last legs F and G, supporting the inner tent insert (C) slowly erect the tent (fig.1). Remember to turn off the valve caps after inflating each insert.

top view of shell plating


!

For ground that prevents the use of pegs/anchors, use dedicated sand weights to the tent legs / weight bags to the lashing ropes.

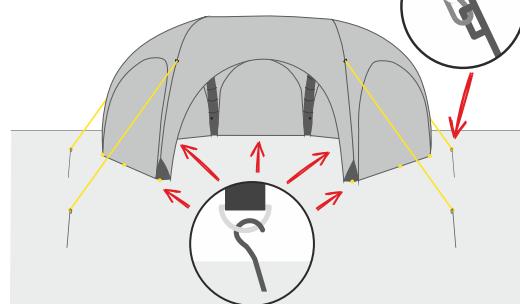
top view of shell plating


2

Attach lashing lines to eyelets with snap hooks x 6.


4

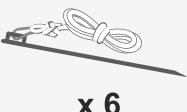
Lock each valve by turning the diaphragm needle approximately 90° clockwise with the dedicated key, this prevents air escaping. An unblocked valve will escape air from the product!


6

Ustabilizuj namiot przy pomocy linek odciągowych. Powinny być naprężone i rozciągnięte na całą swoją długość. Zamocuj linki do podłożu za pomocą szpilek używając młotka. Przymocuj odciągi w nogach za pomocą szpilek do podłożu. Zapnij ściany na zamek, każdą z nich można zamocować do podłożu za pomocą szpilek.

CONSTANT PRESSURE TENT VENTO® SIX

INCLUDED


x 6

eyelet pins with lashings


x 30

straight pins


x 1

mounting hammer

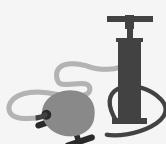

x 1

valve key


x 1

transport bag

NEEDED



hand pump or electric

DISASSEMBLY INSTRUCTION



1 Remove all anchors/pins from lashing lines, legs and walls. Detach the walls.

2 Unscrew the nuts from the inflate/deflate valves and prepare to pump out the air. They are located on the bottom of each tent leg.

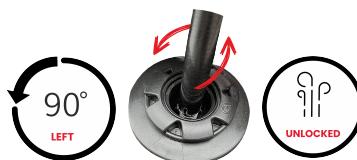
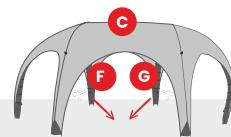
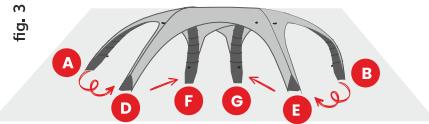


fig. 2



3 Unblock each valve by turning the diaphragm needle about 90° to the left and start pumping air out of each leg.

4 As the air escapes from the legs, direct it inside the tent, starting with legs F and G. Finally, pump the air out of the middle module of the tent insert (C).



5 Fold leg A over legs D and F, similarly the other legs B over E and G (fig.3).

6 Roll up the tent from the canopy side towards the legs, pushing the remaining air towards the inflate/deflate valves in the legs. Assemble and pack the assembly kit into the accessory bag.



INSTRUCTION OF USE

1. Please read the product assembly/disassembly instructions before assembly.
2. When transporting, setting up and assembling the product, take special care to avoid damage to the product or injury during assembly.
3. Before disassembling the product, ensure that there are no sharp objects, tools etc. with sharp edges in the area where the product will be assembled.
4. If using an electric pump, check the condition of the wires before connecting to avoid electric shock.
5. Do not obstruct the safety valves that regulate the air pressure in the product.
6. During increasing gusts of wind, systematically check the seating of the pins/anchors. In winds above 38km/h, the product should be folded immediately.
7. During rain or snowfall, excess water/snow must be systematically removed from the product.
8. The seams of the promotional tents are not sealed to ensure full waterproofing. Seepage at the seams does not constitute a defect in the product.
9. Any soiling must be removed immediately with a damp cloth and warm water without the use of detergents. The use of high-pressure cleaners is prohibited.
10. When using the product, monitor the condition of the sheathing and avoid mechanical damage. Damage to the sheathing may cause the structure to collapse.
11. The product should be cleaned and dry before dismantling. If due to weather or other circumstances the product is assembled wet and dirty, it should be disassembled again as soon as possible, dried and cleaned.
12. The product should be stored in a dry and clean place.



risk of ignition following contact with a fire or ignition source



risk of entanglement or tripping over lashing ropes



risk of overturning due to incorrect installation or strong winds



inappropriate use e.g. climbing



risk of damage to the power cable, e.g. on an electric pump